

HOMELINK PROGRAMING INSTRUCTIONS

Step 1.

Preparing homelink system.

Press and hold two outside buttons on homelink system in car.

Wait for light to change from slow flashing or solid light to a rapid flash. Release buttons.

Step 2.

Programming handheld remote to homelink system.

Make sure path for door is clear. Door will activate during this step.

Hold the handheld remote next to desired button for programming.

Press and hold both until slow flashing or solid light turns to rapid flash. Release buttons. Programming is complete for non rolling code openers. Go to step 3 for rolling code openers.

Step 3.

Rolling code programming.

Use this step only on rolling code type openers.

Find the learn code button on your Garage door opener.

Press and release. Return to your car. Press and release button on homelink system 4 times or until door activates. Programming is complete.

Non rolling code. (models from 1998 and down)

Genie blue max CM7500 or 8500

Hillomatic

Link 2000

Rolling code. (models from 1999 and up)

Genie pro. CM7600 OR 8600

Genie stealth.

Homelink 1-800-355-3515 or www.homelink.com